ASSEMBLY INSTRUCTION
rearTWIST BNC | 75Ω Cable Connector – Crimp version



A Slide the braid onto the cable
- Position the soldering to the cable end

B Slide the crimp ferrule onto the cable

C Prepare cable as shown
- Use an adjustable coaxial cable stripper

D Spread the braided shield




E Crimp the pin
- position the pin on the center conductor
- Crimp the pin with the tool

- Alternatively solder the center conductor to the pin

F Insert the cable into the connector body

G Slide the crimp ferrule over the shield to the front and push the cable in to a end position so it can hear a sharp noise

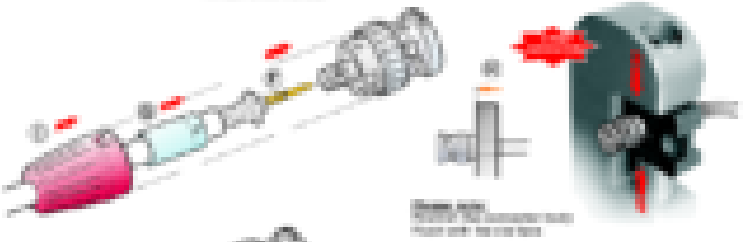

H Crimp the ferrule with the tool

I Snap the boot onto the connector body

Assembled Connector

